



QUICKSTART GUIDE:

WHOA! That's a shiny lookin' new thing you've got right there. Looks like it's a new Dragon, no wait, maybe it's a Hornet! Oh man, that's pretty neat.

Well, you probably want to know you can use it, right? Right. Let's get started!

Creating and Signing-In to your Account:

(recommended method) Create a Pebblebee account using your email address. After entering your information, tap Sign Up in the upper corner to finish.

Login with your existing Facebook or Twitter account. (Note: If you need to reset your password, this is done directly through Facebook.com or Twitter.com).

Forgot Password takes you to a link to reset your account password.

The image shows the Pebblebee mobile application's login screen. At the top is the Pebblebee logo. Below it are two input fields: 'Username' with a user icon and 'Password' with a lock icon. Underneath these is a button labeled 'Log in with Pebblebee' featuring a bee icon. Further down are three social media login options: 'Log in with Facebook' with a Facebook icon and 'Log in with Twitter' with a Twitter icon. At the bottom of the screen are three links: 'Create a new Pebblebee account', 'Reset Password', and 'Privacy Policy'.

pebble
bee

Username

Password

Log in with Pebblebee

Log in with Facebook

Log in with Twitter

Create a new Pebblebee account


Reset Password

Privacy Policy

Charging your device:

Dragon


Your Dragon comes with a Qi Charging Dock for wireless charges your Dragon. Simply place the dragon on the dock. The light on the Dragon should illuminate indicating it is in charge mode.

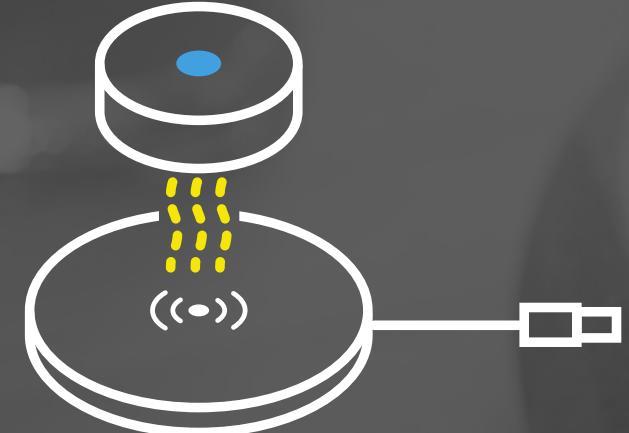

The device charges in about 2.5 hours.

Hornet

The Hornet has a mini usb port on the device. Plug your bundled USB directly into the Hornet and plug the USB into any USB port.

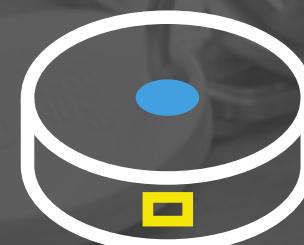

The device charges in about 2.5 hours.


Claiming your device:

Make sure your device is turned on!

Download and open up the freshly updated Pebblebee App! You can get the app via the App Store. (If you already have the Pebblebee App, make sure it's up to date!)

If you've never used a Pebblebee device before, you should see a screen that looks a little something like the image on the right.

Push the button on your device.

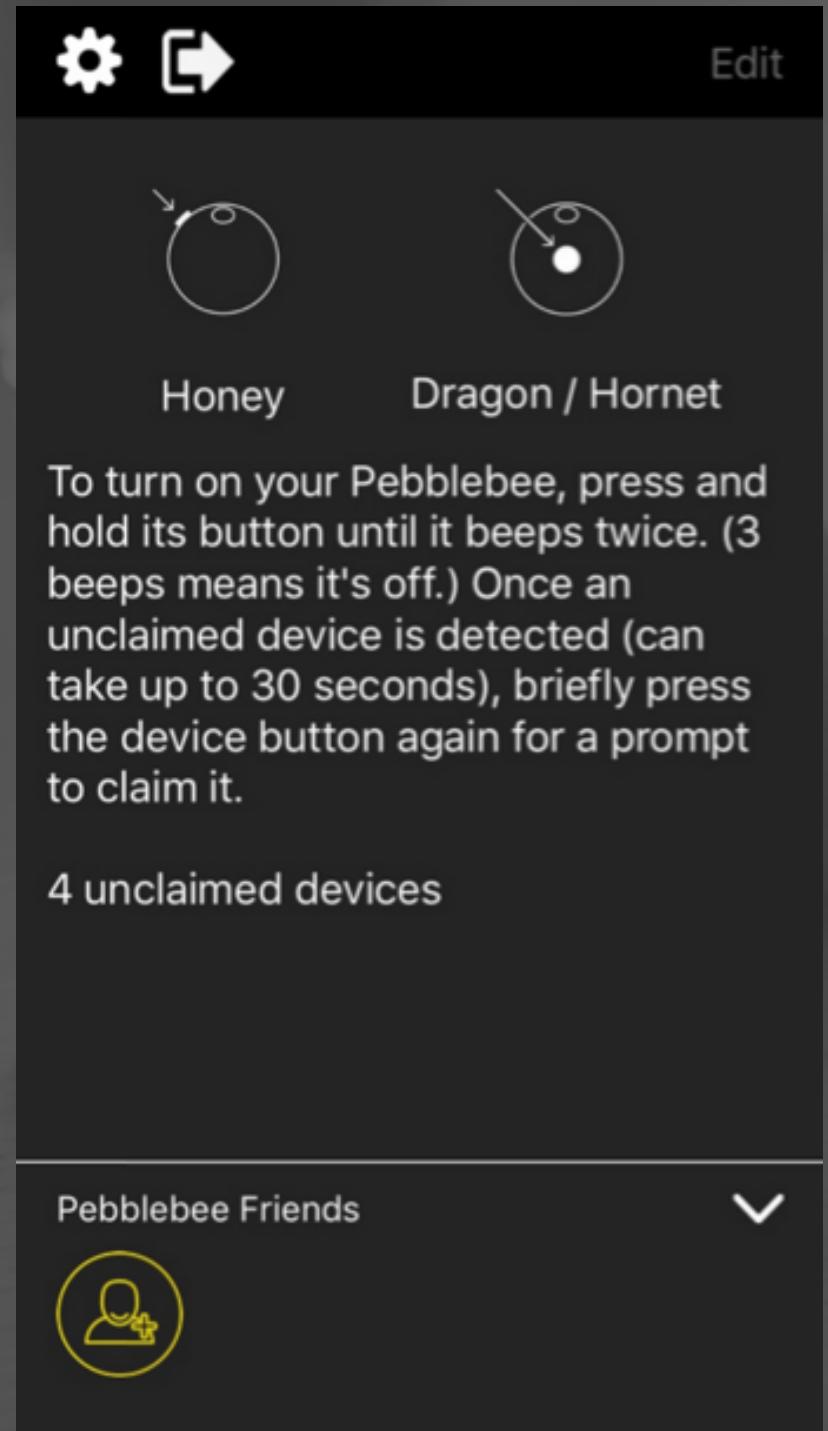

Sharing:

- Sharing allows friends and family to access your Honey's features without granting full access to edit and change settings.
- Friends can be added by email or through Facebook

1. From the Hive, tap on the add friends icon on the bottom


2. Tap add friend, then choose how you would like to add them*

3. If they have not downloaded the app and created an account, you can then invite them to do so. If they have, they will be added to your list

4. On device page, tap the friends icon to manage sharing for that device.

5. Choose which friends to add to the device

*Using Facebook requires logging in to your FB account

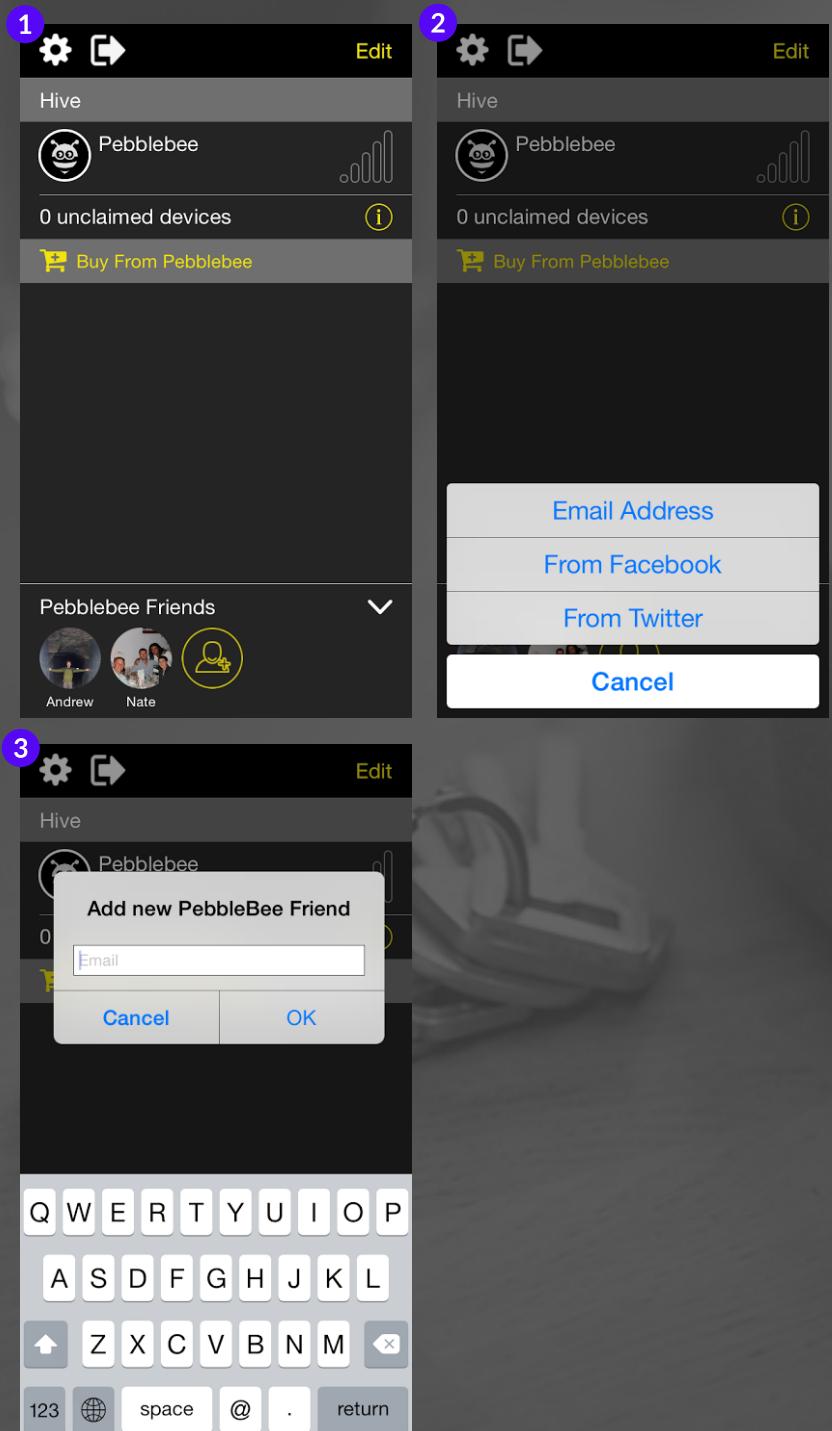


Personalize Device:

Get to this screen by tapping Pebblebee in the top header of the details screen.

Tap on the circle to add a picture for your Pebblebee.



Name and describe your Pebblebee as will be seen in the Hive.

Calibrate the Honey's temperature gauge to track how hot or cold it becomes.

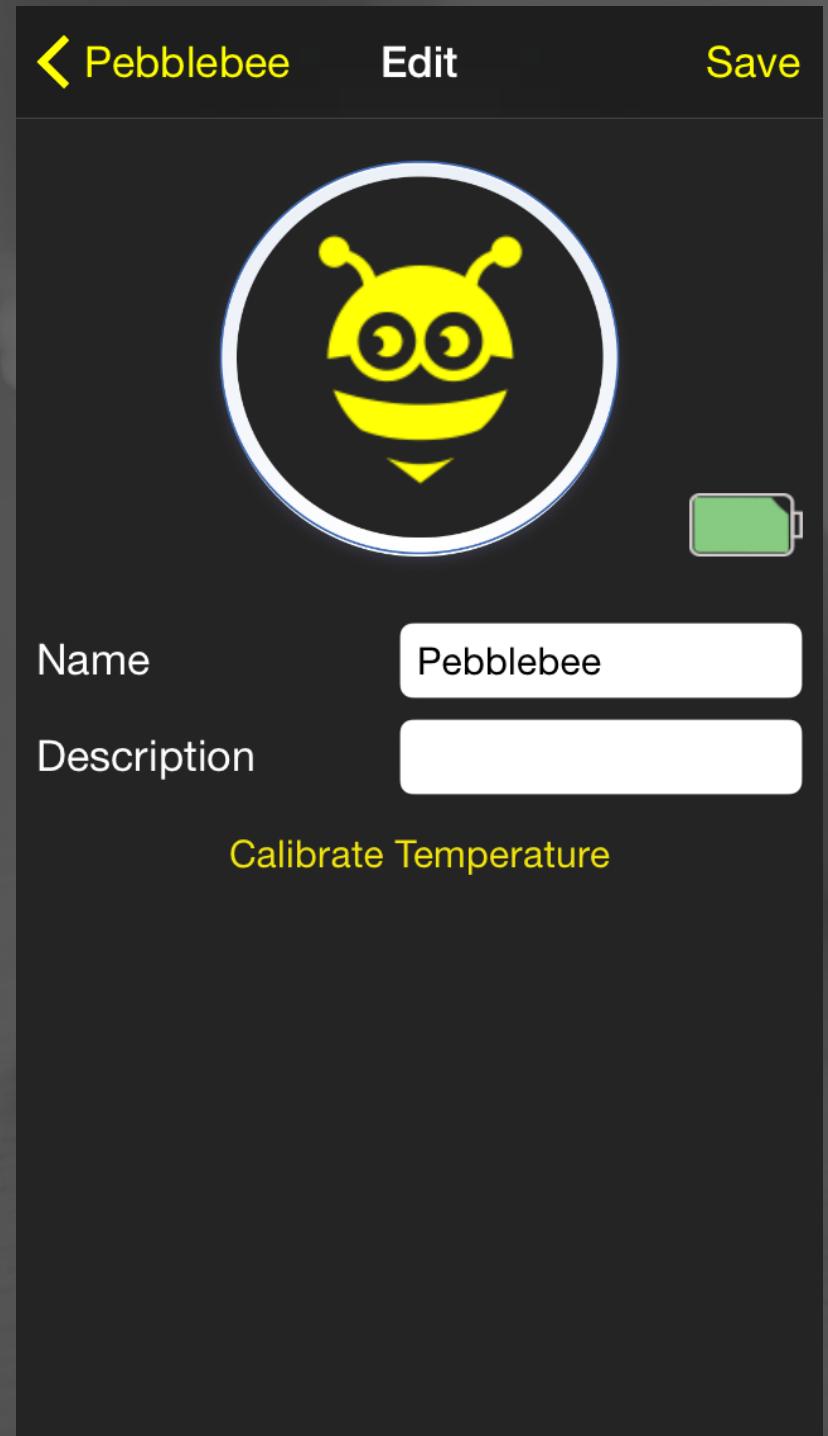


Location Pairing:

1. From the Device page, go to device settings. Select Location Pairing.
2. Tap Add Locations to pull up the map and create new zones
3. Long press on the map to create a new pin, or drag an existing pin to a different location*
4. Once created, choose which zones you would like Range Alerts to be active in

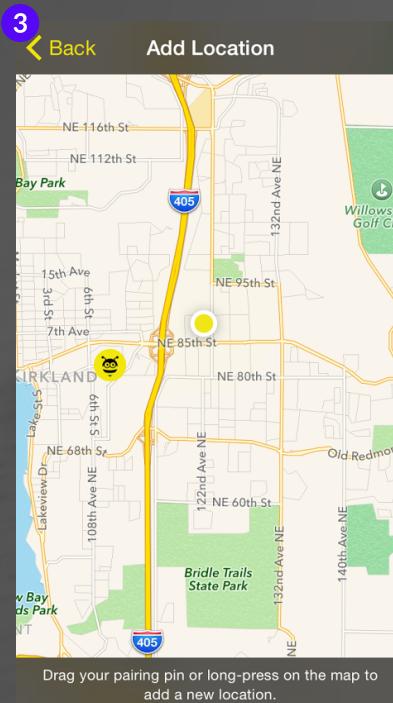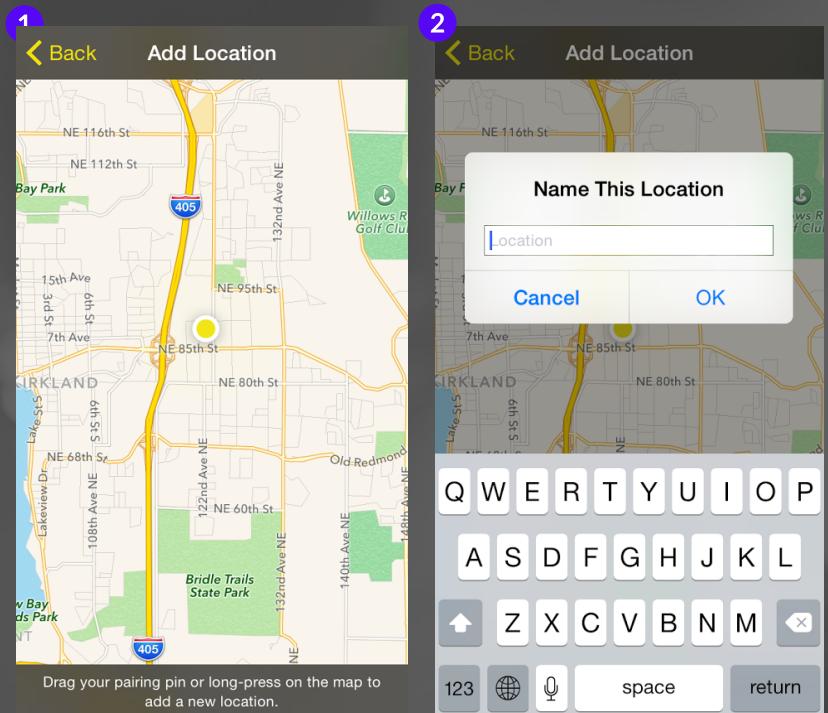

Step 4:
Tap the Add button to claim your device!

Step 5:
Once the device has been claimed, you should be taken to The Hive Screen where your devices are organized.

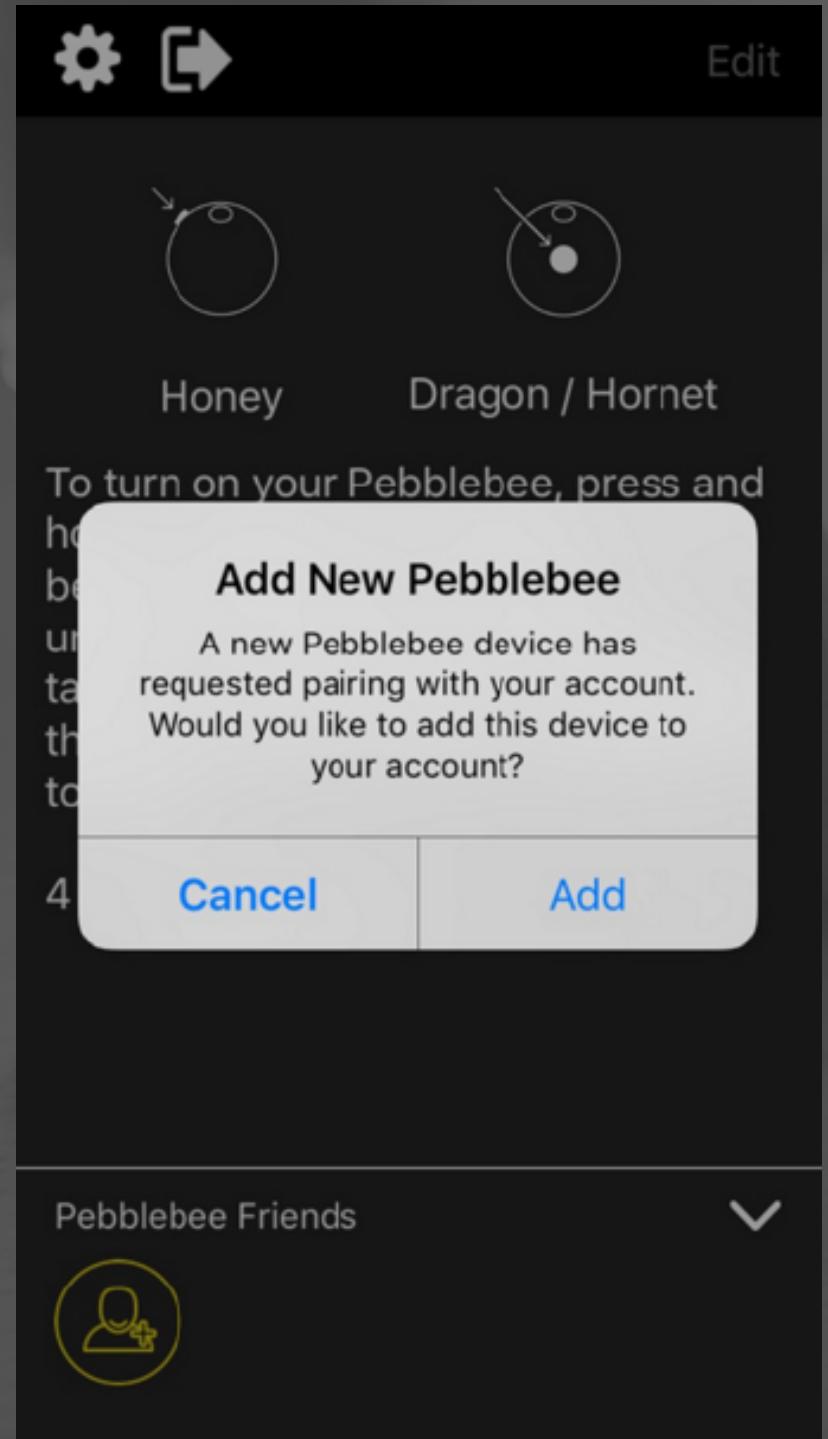

The Detail Screen:

1 Edit

Tap on "Pebblebee" to add a photo and change the name.

2 Locate

Shows a Pin on a Google map indicating the last detected position.

3 Device Settings

Manage range alerts, location pairing, multi-function button, power saving mode, and reporting a lost device.

4 Social

Shared devices are ideal for tracking items together. When you share with other people, your device will appear in their app just as it does in yours. Shared users cannot add, delete, or edit the device.

5 Temperature

Tapping on the thermometer will toggle between celsius to fahrenheit.

6 Beep


Command Pebblebee to sound its alarm.

7 Flash

Command Pebblebee LED to light up.

8 Orientation


Enter calibration mode and access the dragon/hornet orientation features. Note: If you only want to use tracking features, this mode is optional.

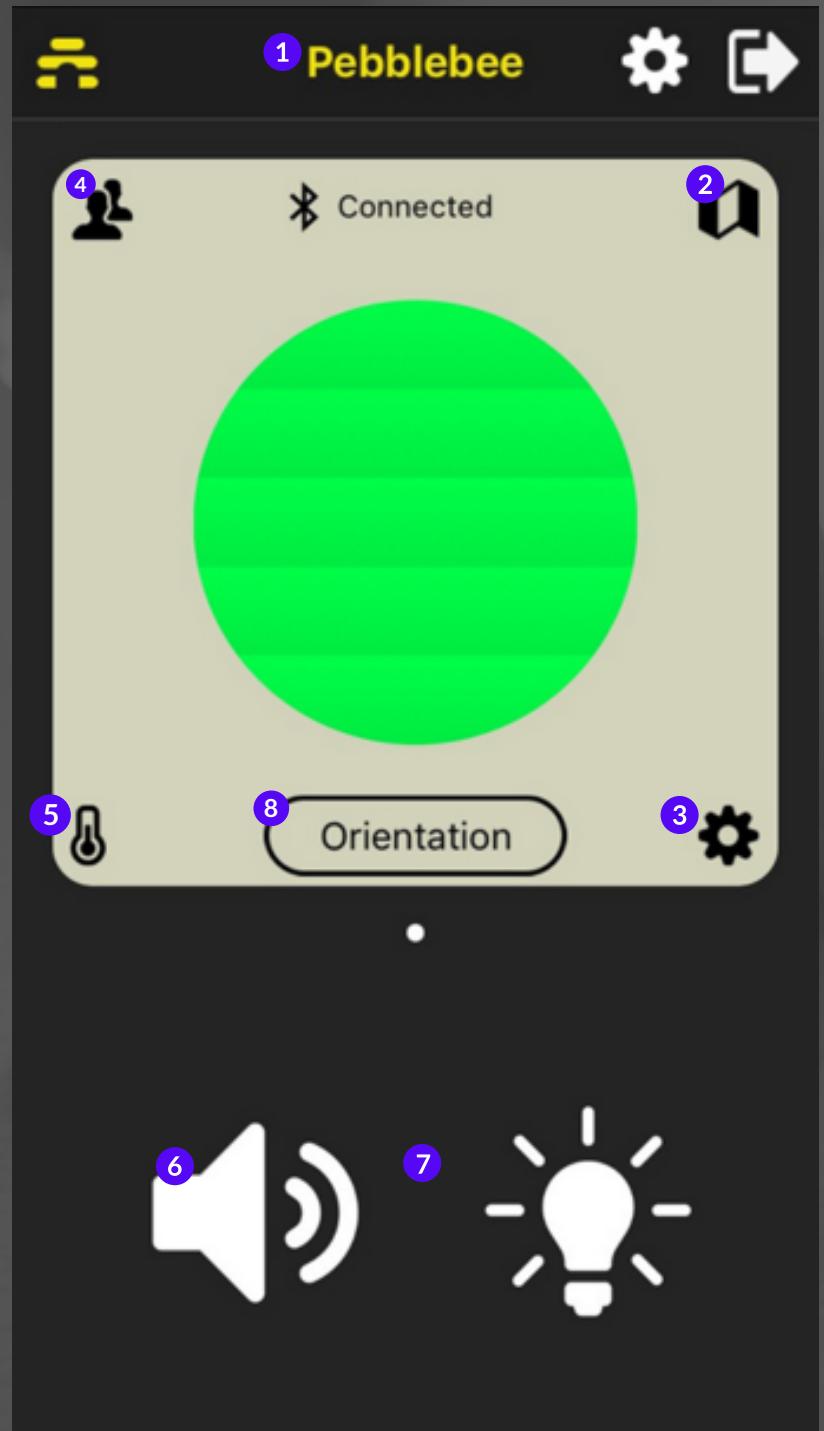

Orientation:

Place your device on a flat surface, and then tap the yellow calibrate button. It may not look like it's doing much, but before you know it the screen will change to a second calibration screen.

Now that your device has entered the second phase of calibration, start twirling your device around in any which way. Sometimes we flip it like a coin, but we must strongly caution you to only do this over a cushioned surface like a bed, or a shag carpet from the 70's.

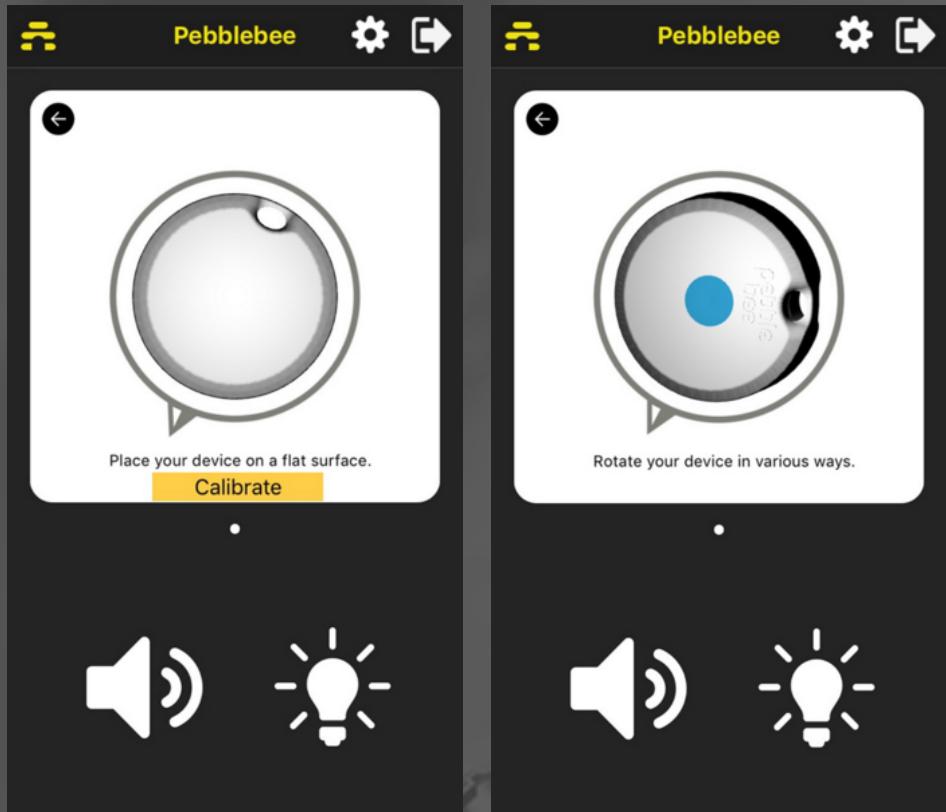

The Hive Screen:

1 Profile Settings

Edit your user profile by changing your username, password or profile picture.

2 Signout

Exit current account to allow another user to log in. Signing out will prevent certain features like Find Phone from working.

3 Edit Hive


Allows you to change the position of your Honey, or unclaim devices.

4 Refresh

drag your finger down the screen to refresh the Hive.

5 Details View

Tap the newly added device. This should take you to the Details page.

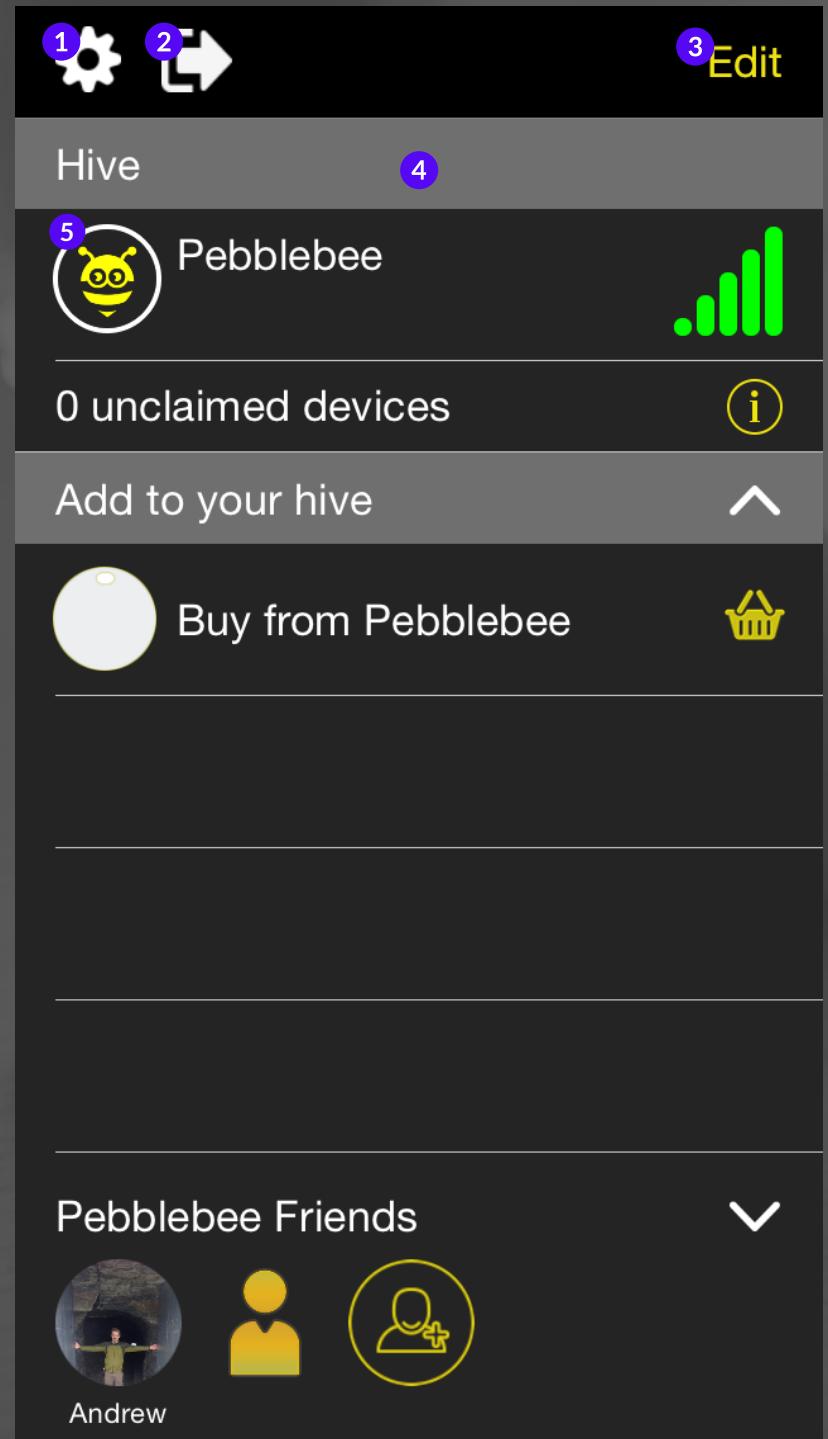

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.